


OmniAC20CAPQ

Installation Guide

Version: 1.1

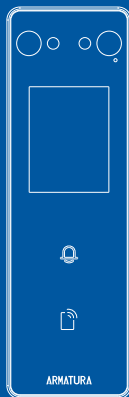

How to Install the Device?

Installation Environment

Please refer to the following recommendations for installation.



KEEP DISTANCE



AVOID GLASS
REFRACTION



AVOID DIRECT
SUNLIGHT
AND EXPOSURE







KEEP EFFECTIVE
DISTANCE
0.3-2.5m

Device Installation





● With Backplate:

1. Attach the mounting template sticker to the wall, and drill holes according to the mounting paper.
2. Fix the Backplate on the wall using wall mounting screws.
3. Attach the device to the Backplate.
4. Fasten the device to the Backplate with a security screw.

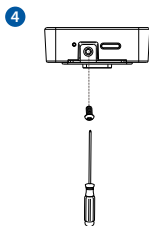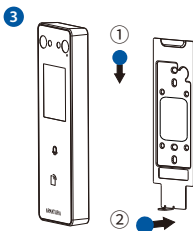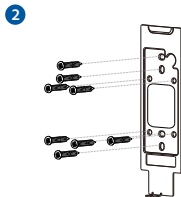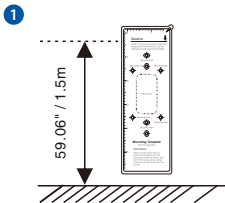

● With Back Cover ★:


1. Attach the mounting template sticker to the wall, and drill holes according to the mounting paper.
2. Fix the Back Cover on the wall using wall mounting screws.
3. Attach the device to the Back Cover.
4. Fasten the device to the Back Cover with a security screw.

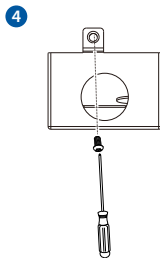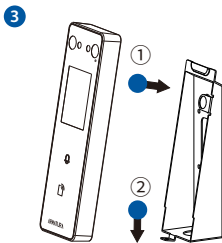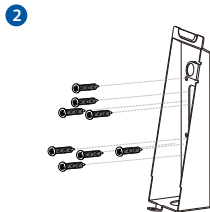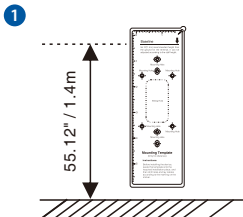

Note: Features and parameters with ★ mark are not available in all devices.

Wiring Diagram

Power Connection

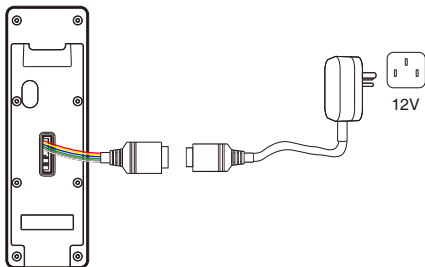


Recommended AC Adapter

- 1) $12V \pm 10\%$, at least 1500mA.
- 2) To share the power with other devices, use an AC Adapter with higher current ratings.

Ethernet Connection

Connect the device and computer software over an Ethernet cable. As shown in the example below:

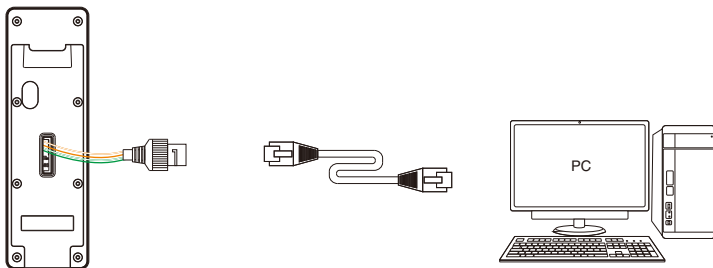



Default IP address: 192.168.1.201
Subnet mask: 255.255.255.0

IP address: 192.168.1.130
Subnet mask: 255.255.255.0

Click on [COMM.] > [Ethernet] > [IP Address], input the IP address and click on [OK].



Note: In LAN, the IP addresses of the server (PC) and the device must be in the same network segment when connecting to the software.

Wiegand Reader Connection

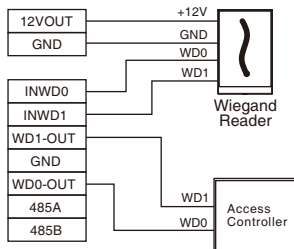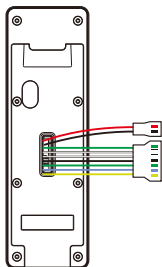


Note: 485A and 485B can be connected to the Barrier gate or the 485 Reader, separately, but cannot be connected to the gate and reader at the same time.

RS485 Connection

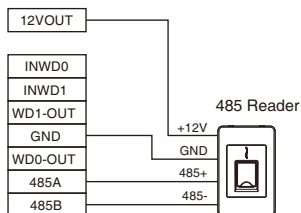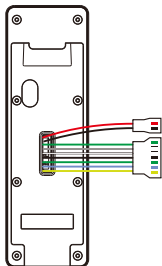


Door Sensor, Exit Button, Auxiliary Connection

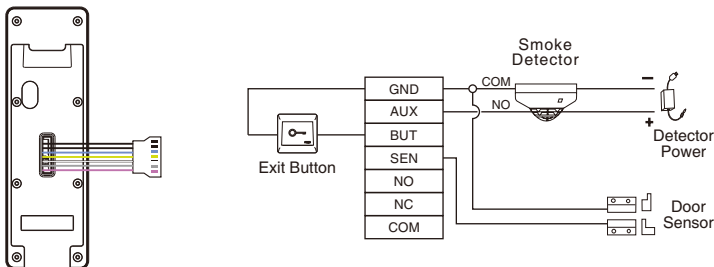

Lock Relay Connection


The system supports **Normally Opened Lock** and **Normally Closed Lock**. The **NO LOCK** (normally unlocked when power-on) is connected with 'NO' and 'COM' terminals, and the **NC LOCK** (normally locked when power-on) is connected with 'NC' and 'COM' terminals. Take NC Lock as an example below:

1) Device not sharing power with the lock





⚠ Do not reverse the polarity.

Normally Closed Lock


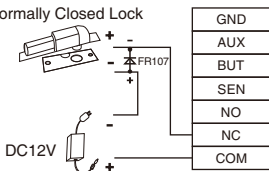


⚠ Maximum 30V 3A input.

2) Device sharing power with the lock

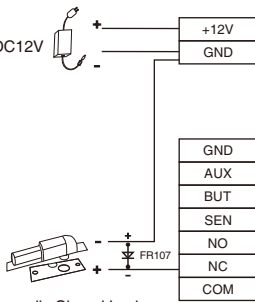

Alarm Connection

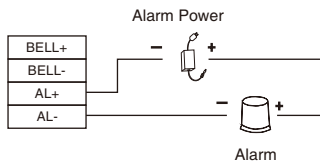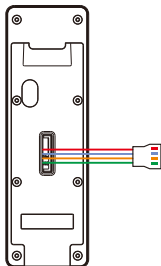



ARMATURA LLC www.armatura.us E-mail: sales@armatura.us
Copyright © 2022 ARMATURA LLC. All rights reserved.